

### Instructions for RC-TV-LINK Remote Control Extender for "DigiBox"

The unit is connected in line with the aerial coax cable connecting the television to the "DigiBox" at the television end. The cable Must be plugged into R.F. outlet 2 on the "DigiBox" and be one continuous length of cable. Once this is done, your "DigiBox" requires a change to a "Menu" item. To do this follow the procedure below.

1. Press the "SERVICES" button followed by the number "4" button.  
(the system set-up menu will appear on-screen)
2. Press one after the other, buttons "0" "1" "SELECT".  
(the menu headed "Installer set-up" will appear)
3. Press button "4" on the handset.  
(the menu headed "R.F. Outlets" will appear)
4. Press the "Arrow-down" button to highlight "Second Outlet Power Supply" then change the "OFF" to "ON" by pressing either "Arrow-left" or "Arrow-right" buttons once.
5. Press the "Arrow-down" button once to highlight "Save new settings" then press the "SELECT" button.

Finally press the "BACKUP" button three times to return to the main screen.

Your "DigiBox" should now respond to the remote control via the infra-red receiver unit which should be placed in a convenient place (ie. next to the television).

### Instructions for changing RF output channel on a Sky "DigiBox"

1. Press the "SERVICES" button followed by the number "4" button.  
(the system set-up menu will appear on-screen)
2. Press one after the other, buttons "0" "1" "SELECT".  
(the menu headed "Installer set-up" will appear)
3. Press button "4" on the handset.  
(the menu headed "R.F. Outlets" will appear)
4. Press the "Arrow-right" button to highlight "The Channel number" then change by pressing the numeric keys for the required channel,  
(a lower number like "22" is less likely to cause interference).
5. Press the "Arrow-down" button twice to highlight "Save new settings" then press the "SELECT" button.

Finally press the "BACKUP" button three times to return to the main screen.

Your Television will now require re-tuning to the new frequency.

#### **PLEASE NOTE:**

If you use the Auto Tuning procedure on most modern TV sets, it will completely clear all existing memories. If you have several pieces of equipment tuned to the TV, use the "MANUAL TUNING" procedure to avoid deleting any existing memories.